



HSW88C Plus

8x8 HDMI Matrix Switch

with CAT5 OUTPUT and up to 60KHz IR



SAFETY NOTICE


The HSW88C Plus 8x8 HDMI Matrix Switch with CAT5 OUTPUT and up to 60KHz IR has been tested for conformance to safety regulations and requirements, and has been certified for international use. However, like all electronic equipment, the HSW88C should be used with care. Please read and follow the safety instructions to protect yourself from possible injury and to minimize the risk of damage to the unit.

- Follow all instructions and warnings marked on this unit.
- Do not attempt to service this unit yourself, except where explained in this manual.
- Provide proper ventilation and air circulation and do not use near water.
- Keep objects that might damage the device and assure that the placement of this unit is on a stable surface.
- Use only the power adapter and power cords and connection cables designed for this unit.
- Do not use liquid or aerosol cleaners to clean this unit.
- Always unplug the power to the device before cleaning.



INTRODUCTION

The HSW88C Plus 8x8 HDMI Matrix Switch with CAT5 OUTPUT and up to 60KHz IR provides the most flexible and cost effective solution in the market to route high definition video sources plus multi-channel (up to 7.1-channel) digital audio from any of the eight HDMI source devices to the remote displays at the same time. Through low cost Cat-5/5e/6 cables, not only high quality video and audio can be transmitted to the display sites, but also users can switch among eight HDMI sources using the push button on the receiver or remote control. With single power design at the source site, each remote module is easily installed without power supply. Furthermore, the built-in IR extension allows users to control the HDMI source devices such as the Blu-ray Disc player or satellite receiver at display site!

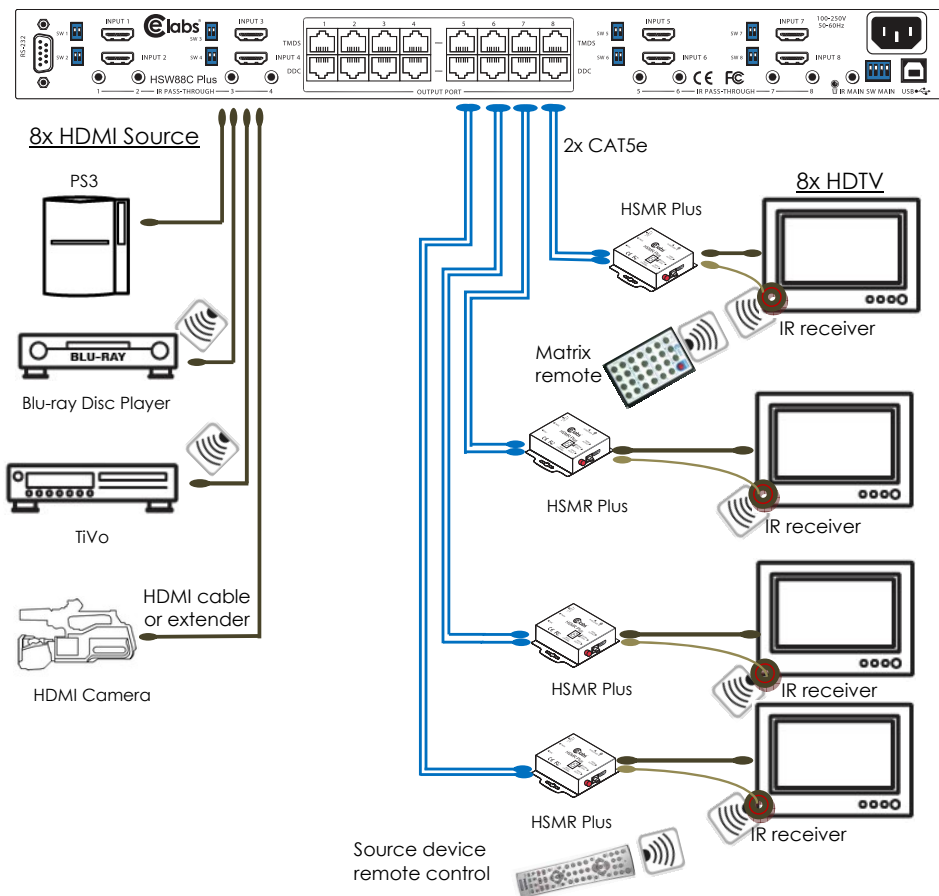

FEATURES

- State-of-the-art Silicon Image (Founder of HDMI) chipset embedded for upmost compatibility and reliability
- HDMI 1.3c compliant
- HDCP compliant
- Allows any source to be displayed on multiple displays at the same time
- Allows any HDMI display to view any HDMI source at any time
- Supports 7.1 channel digital audio
- Supports full IR frequency 20kHz – 60kHz
- Supports default HDMI EDID and learns the EDID of displays
- The matrix switch master can switch every output channel to any HDMI input by push button, IR remote control, USB port or RS-232 control
- Allows control of local HDMI sources such as DVD and TiVo® by IR extender through control path at remote receiver
- Allows control of main matrix switch through control line at remote receiver
- Extends video signal up to 35m (115 feet) over CAT5e at 1080p and likely longer with better HDMI source device (such as PS3®), better grade HDMI display (such as Sony X-series HDTV®), and better quality solid CAT6 cable
- Easy installation with rack-mounting and wall-mounting designs for master and receiver respectively
- Fast response time – 2~5 seconds for channel switch

i The length depends on the characteristics and quality of the cables. Higher resolutions and longer transmission distances require low skew cables (<25ns/100m) for best performance. Unshielded CAT6 with metal RJ-45 connectors is recommended.

TiVo is a registered trademark of TiVo Inc.
PS3 is a registered trademark of Sony Computer Entertainment.
Sony X-series HDTV is a registered trademark of Sony Electronics Inc.

SPECIFICATIONS & PACKAGE CONTENTS

Model Name	HSW88C Plus	
Technical	HSW88C Plus	HSMR Plus
Role of usage	8x8 true matrix Transmitter [TX]	Receiver [RX]
HDMI compliance	HDMI 1.3c	
HDCP compliance	Yes	
Video bandwidth	Single-link 225MHz [6.75Gbps]	
Video support	480i / 480p / 720p / 1080i / 1080p60	
Audio support	Surround sound (up to 7.1ch) or stereo digital audio	
HDMI over CAT5 transmission range	Full HD (1080p) – 35m (115ft) [CAT5e] / 40m (130ft) [CAT6] HD (720p/1080i) – 50m (165ft) [CAT5e] / 55m (180ft) [CAT6]	
HDMI equalization	N/A	8-level digital rotary control
Input TMDs signal	1.2 Volts [peak-to-peak]	
Input DDC signal	5 Volts [peak-to-peak, TTL]	
ESD protection	[1] Human body model — ±19kV [air-gap discharge] & ±12kV [contact discharge] [2] Core chipset — ±8kV	
PCB stack-up	4-layer board [impedance control — differential 100Ω; single 50Ω]	
Input	8x HDMI 1x RS-232 1x IR socket for IR receiver	1x RJ-45 [HDMI signal] 1x RJ-45 [Channel control] 1x IR socket for IR receiver
Output	8x RJ-45 [HDMI signal] 8x RJ-45 [Channel control] 9x IR socket for IR blaster	1x HDMI
HDMI Input selection	Push button / IR remote control / RS-232	Push button / IR remote control
HDMI source control	Controllable via IR pass-through from IR receiver at HSMR Plus to IR blaster at HSW88C Plus	
IR remote control	Electro-optical characteristics: $\tau = 25^\circ$ / Carrier frequency: 20-60kHz	
HDMI connector	Type A [19-pin female]	
RJ-45 connector	WE/SS 8P8C with 2 LED indicators	
RS-232 connector	DE-9 [9-pin D-sub female]	
USB connector ³	Standard type-B [square shape]	
3.5mm connector	Earphone jack for IR blaster [IR Main] IR control on all source devices [IR PASS-THROUGH1~8] IR control on individual source device	Earphone jack for IR receiver [IR RECEIVER] Receives IR commands from any IR remote control
DIP switch [HSW88C]	[SW1~SW8] 2-pin for EDID & audio settings [SW Main] 4-pin for operation & firmware update	

Mechanical		HSW88C Plus	HSMR Plus
Enclosure		Metal case	
Dimensions (L x W x H)	Model	440 x 290 x 44mm [1'5" x 11.4" x 1.7"]	85 x 90 x 25mm [3.3" x 3.5" x 1"]
	Package	530 x 400 x 130mm [1'9" x 1'4" x 5"]	
	Carton	280 x 550 x 420mm [1'1" x 1'10" x 1'5"]	
Weight	Model	3250g [7.2 lbs]	180g [6.3oz]
	Package	7.1 kg [15.6 lbs]	
Fixedness		1U rack-mount with ears	Wall-mount with screws
Power supply		AC Power 100-240V	Not necessarily required ¹
Power consumption		60 Watts [max]	1.5 Watt [max] (provided by HSW88C Plus)
Operation temperature		0~40°C [32~104°F]	
Storage temperature		-20~60°C [-4~140°F]	
Relative humidity		20~90% RH [no condensation]	
Package Contents		1x HSW88C Plus 1x IR blaster ² 1x IR receiver 2x 1U rack mounting-ear 1x IR remote control ²	8x HSMR Plus 8x IR receiver 16x Wall-mounting screws 1x UL AC C13 power cord 1x Instruction Manual




¹ The HSMR Plus has been tested extensively and found that it doesn't require external power supply. If in rare situation you find it cannot work with the HSW88C Plus, please use any +5V power adapter to plug in the power jack and see if it can work. If not, please contact our technical support for further service.

² Additional IR remote control and IR blaster cable can be purchased as optional accessories to control the HDMI sources located separately.





³ USB or RS-232 control must be connected either one at a time. Connecting both types of cables may cause command confusion.

PANEL DESCRIPTIONS

HSW88C Plus




1. **Power:** Power control
2. **Seven Segment LED Indicators:** Control display
3. **Front panel push buttons:** Used to input source and display channel number
4. **IR:** IR receiver
5. **IR Receiver Connector:** Plug in IR receiver

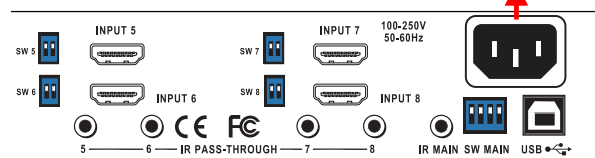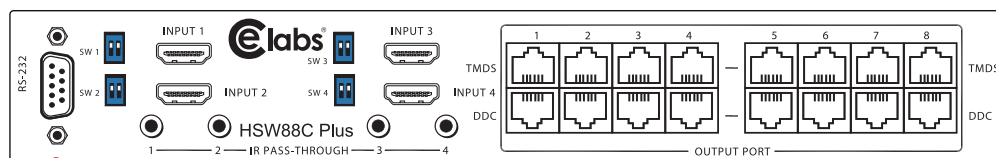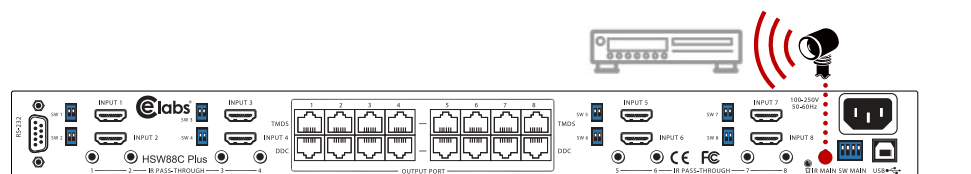

6. **RS-232:** RS-232 control port
7. **SW 1 – SW 8:** 2-pin DIP switch for operation & firmware update (see DIP Switch section)
8. **IR PASS-THROUGH 1 – 8:** 3.5mm IR blaster socket for individual HDMI source control
9. **INPUT 1 – INPUT 8:** HDMI inputs
10. **OUTPUT PORT 1 – 8:** RJ-45 outputs for each output channel
11. **IR Main:** 3.5mm IR blaster socket for HDMI source control on all 8 inputs [default socket for IR blaster]
12. **SW Main:** 4-pin DIP switch for audio & EDID settings (see DIP Switch section)
13. **AC Power:** 100-240V
14. **USB:** USB control port

HSMR Plus

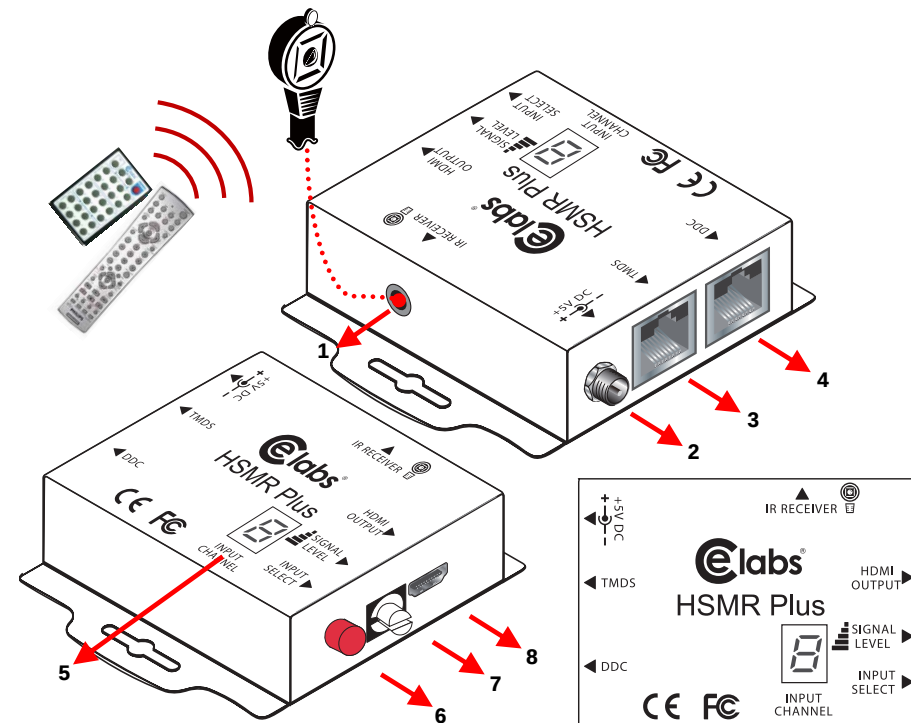

1. **IR RECEIVER:** Plug in IR receiver
2. **+5V DC:** Spare power jack for over 60m transmission when the RX may need external power to work*.
3. **TMDS:** Plug in the CAT5 connected to the respective TMDS port on the HSW88C Plus
4. **DDC:** Plug in the CAT5 connected to the respective DDC port on the HSW88C Plus
5. **INPUT CHANNEL:** Display the current showing HDMI source channel
6. **INPUT SELECT:** Push button for switching input source channel in sequential order
7. **Signal Level:** Adjust the 8-level equalization control to the received HDMI signals. The HDMI signal level varies from 0 (strongest) to 7 (weakest) for respective transmission length from longest possible range to short distance. Please adjust the signal level from 7 to 0 and stop turning the rotary switch whenever the audio/video is playing normally. Inappropriate signal level setting may cause overpowering issues that would shorten the product life significantly!
8. **HDMI Output:** Connect to a HDTV with a HDMI cable.

i The HSMR Plus has been tested extensively and found that it doesn't require external power supply. In rare situation you find it cannot work with the HSW88C Plus, please use any +5V power adapter to plug in the power jack and see if it can work. If not, please contact our technical support for further service.

DIP SWITCH

SW1-SW8 for EDID/Audio

DIP Switch Position		Video	Audio	Description
Pin 1	Pin 2			
OFF (↑)	OFF (↑)	Up to 1080p	Surround ¹	Default Mode ² – Up to 1080p video & surround sound audio output up to 7.1ch DTS-HD Mater & Dolby TrueHD
OFF (↑)	ON (↓)	Up to 1080p	Stereo	Safe Mode ³ – Make the system output at 1080p video and stereo audio for basic compatibility
ON (↓)	OFF (↑)	Bypass ⁴	Bypass ⁴	EDID Learning Mode ⁵ – for learning EDID from the display while playing any received HDMI audio format
ON (↓)	ON (↓)	Bypass	Stereo	EDID Learning & Stereo Mode ⁵ – for learning EDID from the display while enforcing stereo output if any HDTV cannot play surround sound normally

Note

1. If the HDTV shows video but without audio, please try to set audio mode to stereo.
2. Factory default setting of [SW1]-[SW8] is pin 1 at OFF (↑) and pin 2 at OFF (↑) for 1080p with surround sound audio.
3. If you encounter any unsolved audio/video output problem during system installation, please turn any [SW1]-[SW8] to pin 1 at OFF (↑) and pin 2 at ON (↓) for safe mode to enforce up to 1080p and stereo output for system check. However, the safe mode cannot be initiated if your HDMI source is set to enforce 1080p output. In this case, please reconfigure your HDMI source to all resolution output for troubleshooting.
4. Bypass means the matrix will maintain playing the original format of HDMI signals in video and perhaps audio. By setting at this mode, the users may encounter compatibility issue among different kinds of HDMI sources and displays. If you cannot get the audio and/or video output normally at the system installation, please change the DIP switch setting to default mode or even safe mode to verify the functionality of the device.
5. To learn the EDID of HDMI display for respective HDMI source devices, please see the [EDID Learning] section in the next page for more detail information.

SW Main for firmware update (for technical support only)

DIP Switch Position		Pin 1	Pin 2	Pin 3	Pin 4
Normal Operation Mode [via RS-232 port] ⁶		OFF (↑)	OFF (↑)	OFF (↑)	OFF (↑)
Normal Operation Mode [via USB port] ⁷		OFF (↑)	OFF (↑)	OFF (↑)	ON (↓)
Firmware Update Mode ⁸	Block A [main]	ON (↓)	OFF (↑)	OFF (↑)	OFF (↑)
	Block B [remote]	ON (↓)	OFF (↑)	ON (↓)	OFF (↑)
	Block C [HDMI]	ON (↓)	ON (↓)	OFF (↑)	OFF (↑)



Note

6. Factory default for SW Main is pin 1 at OFF (↑), pin 2 at OFF (↑), pin 3 at OFF (↑), and pin 4 at OFF (↑). PLEASE MAINTAIN THIS SETTING AT ANYTIME FOR REGULAR USE VIA RS-232 CONTROL!
7. Factory default for SW Main is pin 1 at OFF (↑), pin 2 at OFF (↑), pin 3 at OFF (↑), and pin 4 at ON (↓). PLEASE MAINTAIN THIS SETTING AT ANYTIME FOR REGULAR USE VIA USB CONTROL!
8. Sequence for firmware update

WARNING!

Firmware update only can be done via RS-232 port and connection to PC set at COM1

1. Power off the HSW88C Plus. Execute the firmware update program on your PC via COM1 port connection to the RS-232 port of the HSW88C Plus.
2. Set the pin 1 of [SW Main] at ON (↓) for firmware update mode.
3. Set pin 2 and pin 3 at respective positions to assign which Block to be updated.
4. Power on the HSW88C Plus. The firmware update program should begin this update sequence automatically. If not, please check the RS-232 connection status between PC and HSW88C Plus.
5. After the OK message shows up to indicate the firmware update sequence for designated Block is complete, please turn off the HSW88C Plus.
6. Repeat step 3 ~ step6 if you want to update the firmware of the remaining Blocks.
7. Set the [SW Main] switch position to Normal Operation Mode.
8. Power on the HSW88C Plus.

IR PASS-THROUGH

IR Sockets



HSW88C Plus

IR Main: The default location for IR blaster to transmit all IR command signals received from any of the eight remote receivers to all of the HDMI sources.

IR PASS-THROUGH 1-8: IR blaster connected here can only transmit IR command signals from the remote receivers that are setting at respective input channel from 1 to 8.

HSMR Plus

IR RECEIVER: IR receiver connected here can receive all IR command signals from the IR remote controls of HSW88C Plus and all other HDMI source devices.

Definition of IR Earphone Jack



The IR extension cables are standard market configuration. You can buy from CE labs if necessary for replacement use.

Supported IR Data Format

Data Format	Suitable	Not Recommended
NEC	✓	
RC5	✓	
TOSHIBA MICOM CODE	✓	
GRUNDIG CODE	✓	
SONY 12 BIT CODE	✓	
SONY 15 BIT CODE	✓	
SONY 20 BIT CODE	✓	
RCA CODE		✓
RCM CODE		✓
MATSUSHITA CODE		✓
MITSUBISHI CODE	✓	
ZENITH CODE	✓	
JVC CODE	✓	
M50560-001P	✓	
MN6125H	✓	
MN6125L	✓	
MN6014_C5D7	✓	
MN6014-C6D6	✓	
MC14457P	✓	
LC7464(AHEA)	✓	
GEMINI_CM	✓	

HARDWARE INSTALLATION

HSW88C Plus as master unit

1. Connect all sources to HDMI Inputs on the 8x8 HDMI Matrix Switch master unit HSW88C Plus
2. Connect each DDC output port on the HSW88C Plus to respective DDC input on the remote receiver HSMR Plus
3. Connect each TMDS output port on the HSW88C Plus to respective TMDS input on the remote receiver HSMR Plus
4. Connect IR blaster to the IR MAIN jack of HSW88C Plus and direct the IR blaster to the built-in IR receiver of the sources
5. Connect the UL AC C13 power cord to the HSW88C Plus power jack
6. Power on all HDMI sources
7. Power on the HSW88C Plus

HSMR Plus as receiver unit

1. Connect each HDMI output to HDMI displays
2. Connect each DDC output port on the HSW88C Plus to respective DDC port on the HSMR Plus
3. Connect each TMDS output port on the HSW88C Plus to respective TMDS input on the remote receiver HSMR Plus
4. Connect IR receiver and place the IR receiver at the appropriate position that can receive the IR command signals sent from the users
5. Dial the 8-level rotary control switch to adjust the HDMI signal level until the picture and sound are clear

CHANNEL CONTROL

SOURCE SIDE

Method A: Push Button


1. Use the switch button on output port to select which port to be changed.
 - "+": change selected output port in ascending order
 - "-": change selected output port in descending order
2. Push the switch button on input channel. The source will be sequentially changed. After few seconds, the setting will be active.

Method B: IR Remote Control

- a. Firstly please push one of the INPUT buttons to choose which HDMI input source you are going to setup. After that, you can have multiple outputs playing the same content from the selected INPUT #1-#8 by pushing the corresponding OUTPUT buttons. The setting will be effective in a couple of seconds.

INPUT & OUTPUT MAPPING

INPUT 1	HDMI input port #1
INPUT 2	HDMI input port #2
INPUT 3	HDMI input port #3
INPUT 4	HDMI input port #4
INPUT 5	HDMI input port #5
INPUT 6	HDMI input port #6
INPUT 7	HDMI input port #7
INPUT 8	HDMI input port #8
OUTPUT 1	HDMI output port #1
OUTPUT 2	HDMI output port #2
OUTPUT 3	HDMI output port #3
OUTPUT 4	HDMI output port #4
OUTPUT 5	HDMI output port #5
OUTPUT 6	HDMI output port #6
OUTPUT 7	HDMI output port #7
OUTPUT 8	HDMI output port #8

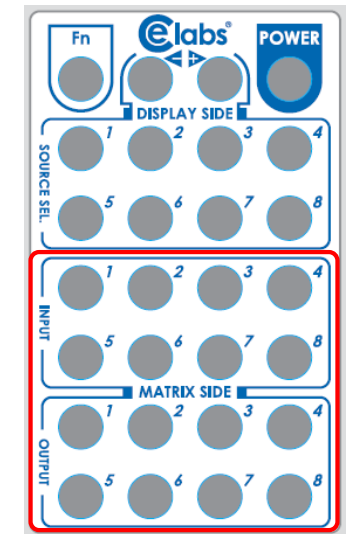


FUNCTION KEY


	FUNCTION
FN + SOURCE SEL. 1	Escape System LOCK
FN + SOURCE SEL. 2	Enter System LOCK (most buttons, IR control, and RS-232 control become inactive, except Escape System LOCK command)

Method C: Software Control through RS-232 or USB

Software Control Menu

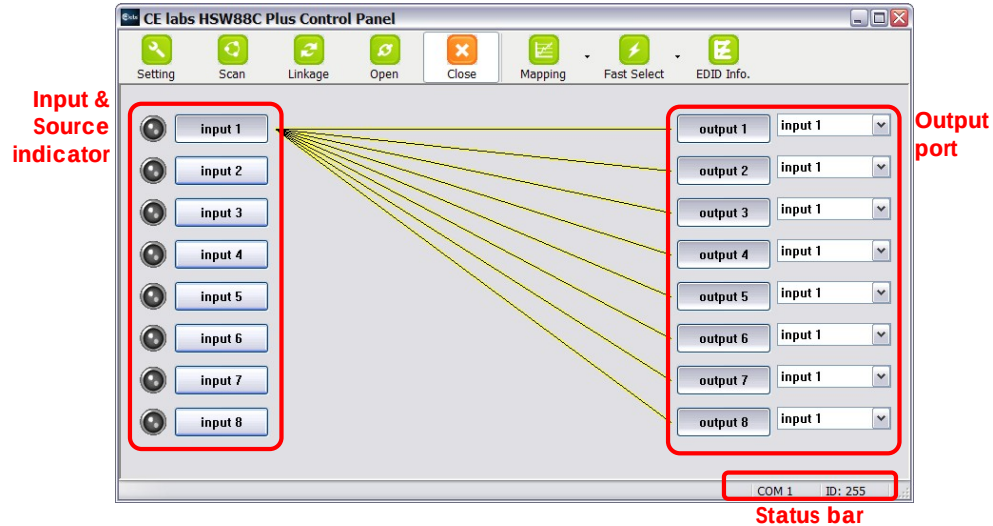

1. Setting button:

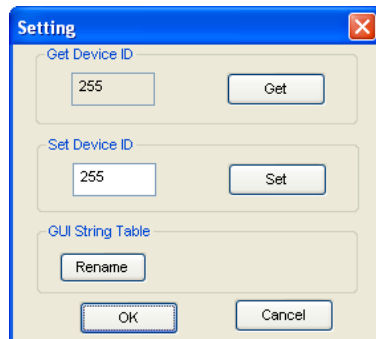

Click Get button to read back device ID.


Click Set button to write device ID.

Click Rename button to open the String Table.

In the String Table, assign the captions for each input and output port for easy recognition.


For example:

Rename the Input1 to "Blu-ray player", Input2 to "Sat. receiver," input3 to "Game console," input4 to "AV receiver," input5 to "HDMI camcorder," ... etc., and rename output1 to "Conf. RM1," output2 to "Conf. RM2," output3 to "Lobby," output4 to "Main projector," ... etc.

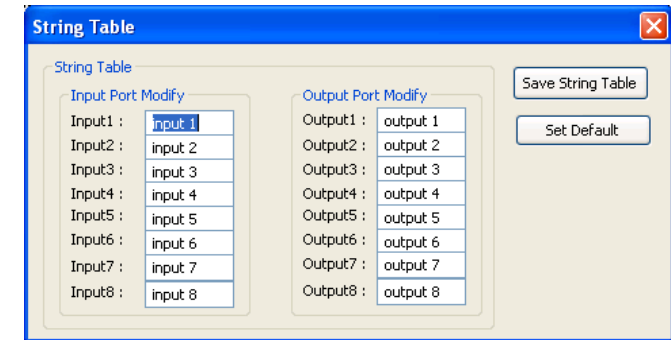


Click Save String Table to save the caption setting (turn effective after program restart)

Click Set Default to pop up the confirmation message below to erase the captions and reset the string table back to default setting. (turn effective after program restart)

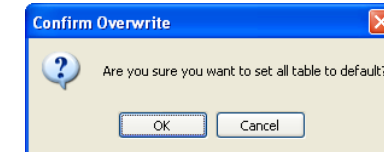

2. Scan button:

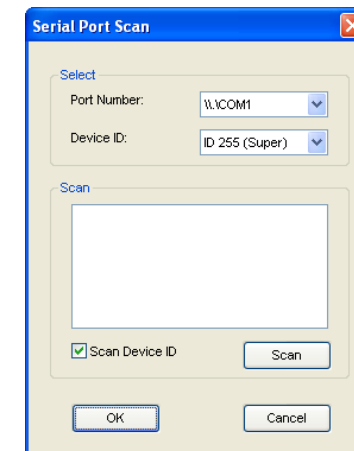

Serial Port Scan:

Click Scan button, the machine will scan the all COM port and show them.

Select the RS232 serial port connected to the Matrix switch.

And set device ID 255 is for all device.

Only the same device id or 255 can get the command you sent.

Click OK. Get the new status from the Matrix switch (the port you select.)


3. Linkage button:

Click Linkage button to read back all status.

4. Open/Close button:

Click this button to close or open COM port.

5. Mapping button:

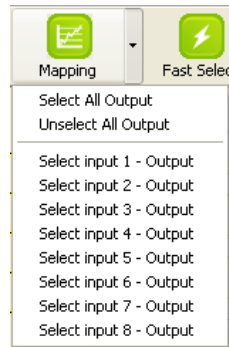

Select All Output:

Select "set all output", and then select the source on main menu. You can quickly set all output to the same source.

Unselect All Output:

Release output selection.

Select Input1~8-Output:

Select Input Source. Then select the output port icon.

For example:

Select input source 1. Then select output ports one and two. The video and audio will be sent to ports one and two.

6. Fast Select button:


Click Fast select button. Quick setting.

Input one > Output Port one
Input two > Output Port two
.....

Click Fast select pull down menu.

Select Input Num-Output Num

Input source #1 > Output port #1
Input source #2 > Output port #2
.....

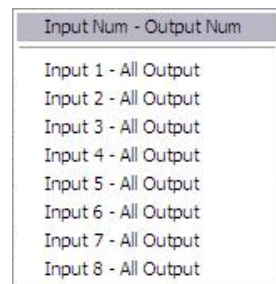

Select Input* - All Output

Send the same source to all output.

7. Output Port:

Pull down menu and select which source to be sent to this output port.


One by one setting

On main menu screen.

First select input source. Then select the output ports which you want to send the video and audio from this source.

When you select the input source, the source will change to gray. When you select the output port one by one, the selected output port will change to gray.

The linking line will change to yellow.

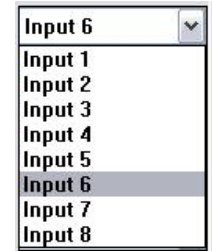

Group setting

First select output ports one by one. Then select the input source.

The selected output ports change the setting at the same time.

Terminal Settings:

Baud rate: 9600
Data length: 8bit
Parity check: No
Stop bit: 1

Command Set:

COMMAND	ACTION	COMMAND	ACTION
ST	System Status	VR	Firmware Version
A1	Output A selects Input 1	E1	Output E selects Input 1
A2	Output A selects Input 2	E2	Output E selects Input 2
A3	Output A selects Input 3	E3	Output E selects Input 3
A4	Output A selects Input 4	E4	Output E selects Input 4
A5	Output A selects Input 5	E5	Output E selects Input 5
A6	Output A selects Input 6	E6	Output E selects Input 6
A7	Output A selects Input 7	E7	Output E selects Input 7
A8	Output A selects Input 8	E8	Output E selects Input 8
B1	Output B selects Input 1	F1	Output F selects Input 1
B2	Output B selects Input 2	F2	Output F selects Input 2
B3	Output B selects Input 3	F3	Output F selects Input 3
B4	Output B selects Input 4	F4	Output F selects Input 4
B5	Output B selects Input 5	F5	Output F selects Input 5
B6	Output B selects Input 6	F6	Output F selects Input 6
B7	Output B selects Input 7	F7	Output F selects Input 7
B8	Output B selects Input 8	F8	Output F selects Input 8
C1	Output C selects Input 1	G1	Output G selects Input 1
C2	Output C selects Input 2	G2	Output G selects Input 2
C3	Output C selects Input 3	G3	Output G selects Input 3
C4	Output C selects Input 4	G4	Output G selects Input 4
C5	Output C selects Input 5	G5	Output G selects Input 5
C6	Output C selects Input 6	G6	Output G selects Input 6
C7	Output C selects Input 7	G7	Output G selects Input 7
C8	Output C selects Input 8	G8	Output G selects Input 8
D1	Output D selects Input 1	H1	Output H selects Input 1
D2	Output D selects Input 2	H2	Output H selects Input 2
D3	Output D selects Input 3	H3	Output H selects Input 3
D4	Output D selects Input 4	H4	Output H selects Input 4
D5	Output D selects Input 5	H5	Output H selects Input 5
D6	Output D selects Input 6	H6	Output H selects Input 6
D7	Output D selects Input 7	H7	Output H selects Input 7
D8	Output D selects Input 8	H8	Output H selects Input 8

DISPLAY SIDE


Method A: Push button for switching input channels

Press the INPUT SELECT push button to switch the input source on the respective output port connected to the matrix receiver in sequential order. The selected input source will be displayed on the seven segment display of INPUT CHANNEL.

Method B1: IR remote control for switching input channels

Please decide which input channel to be selected by pressing Source Selection 1 to Source Selection 8. Or you can use left ◀ and right ▶ button to enter IR control mode and select the input channel in ascending and descending order respectively. The setting will be effective in a couple of seconds.

◀	Switch input port in descending order*
▶	Switch input port in ascending order*
SOURCE SEL. 1	Switch the display channel at the remote site to input port 1
SOURCE SEL. 2	Switch the display channel at the remote site to input port 2
SOURCE SEL. 3	Switch the display channel at the remote site to input port 3
SOURCE SEL. 4	Switch the display channel at the remote site to input port 4
SOURCE SEL. 5	Switch the display channel at the remote site to input port 5
SOURCE SEL. 6	Switch the display channel at the remote site to input port 6
SOURCE SEL. 7	Switch the display channel at the remote site to input port 7
SOURCE SEL. 8	Switch the display channel at the remote site to input port 8

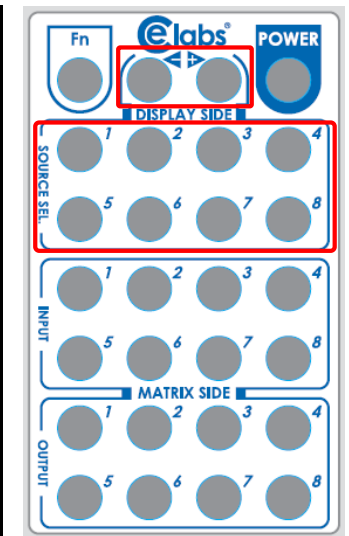

Note

Right (▶) button to switch input source in ascending order (1, 2, 3, 4, 5, 6, 7, 8, 1, 2, ...)

Left (◀) button to switch input source in descending order (1, 8, 7, 6, 5, 4, 3, 2, 1, 2, ...)

Method B2: IR remote control for controlling the HDMI sources

Users can use the corresponding IR remote to control the HDMI source.



DO NOT press any button more than once within 1 second on the HSMR Plus INPUT SELECT and the IR remote control as both devices need about 1 second to communicate with the matrix unit to validate the command you sent. Press multiple times within 1 second segment could lead to unexpected lock-on failure.

EDID LEARNING

The EDID learning function is only necessary whenever you encounter any display on the HDMI output port that cannot play audio and video properly. Because the HDMI source devices and displays may have various level of capability in playing audio and video, the general principle is that the source device will output the lowest standards in audio format and video resolutions to be commonly acceptable among all HDMI displays. In this case, a 720p stereo HDMI signal output would be probably the safest choice. Nevertheless, the user can force the matrix to learn the EDID of the lowest capable HDMI display among others to make sure all displays are capable to play the HDMI signals normally by performing the procedures stated below.

SW1-SW8 pin 1 must be set "ON" for EDID Learning Mode

DIP Switch Position		Video	Audio	Description
Pin 1	Pin 2			
ON (↓)	OFF (↑)	Bypass	Bypass	Learning EDID from the receiver

Method 1: Manually connect displays to HDMI input ports

1. Power up the matrix master unit. Connect the HDMI display that its EDID needs to be learned to any of the HDMI **INPUT 1 – INPUT 8** port where your source device has trouble to show the picture normally.
2. To learn the display's EDID for source device connected to respective HDMI INPUT 1 – INPUT 8 port, pull both pins of respective DIP switch **SW 1 – SW 8** up-and-down then stay at ON-OFF (↓-↑) and wait for about 5 seconds to complete the EDID learning process. You DON'T NEED to pull up the DIP switch again unless you want to learn another display's EDID by pulling both DIP switch pin 1 and pin 2 of **SW 1 – SW 8** up-and-down one more time.
3. Repeat step 1 & step 2 if you want to learn the EDID of this HDMI display on any other HDMI input ports that have same trouble playing the audio/video properly.

Method 2: Use the front panel of the master unit

Button	Function
Output Port	EDID will be read from display via the connected receiver unit from the respective output port
Input Channel	The EDID will be sent to the input source connected to respective HDMI input port

One by One learning

1. Select the desired **Output Port** and **Input Channel** that you want the EDID of the display connected to this specified output port can be learned for the specified input channel.
2. Press the "+" button of the **Output Port** and "-" button of the **Input Channel** at the same time for 2 seconds.
3. Release these two buttons. The EDID will be read from the receiver unit connected to the display and sent the **Output Port** then written to the chosen **Input Channel**.
4. If the operation is successful, the Input Channel will show "O" (OK). If the operation is not successful, it will show "F" (failure).

One to All learning

1. Press the "+" button of the **Output Port** and the "+" button of the **Input Channel** at the same time for 2 seconds.
2. Release these two buttons. The EDID will be read from the receiver unit connected to the display and sent the **Output Port** then written to all eight **Input Channels**.
3. If the operation is successful, the Input Channels will show "O" (OK). If the operation is not successful, it will show "F" (failure).

Method 3: Use IR remote control to the HSMR Plus receiver units


Step1. Press FN key first

Step2. Wait until the LED on the receiver showing "U"

Step3. Then press the button


- "1" Default A – 1080p & 7.1ch audio
- "2" Default B – 1080p & stereo audio
- "3" Default C – 720p & stereo audio
- "4" Default D – DVI Mode
- "5" **Learning EDID from this display to the selected input**

Step4. If the procedure is successful, the LED of will show "O", otherwise it will be "F" to indicate failure

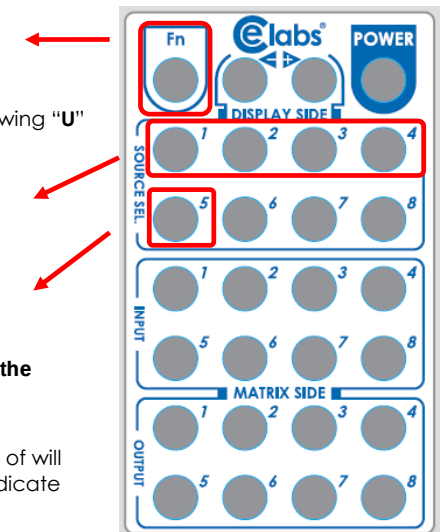

IR DIRECT CODES

Default Custom Code — IR2 Code: 00 FF

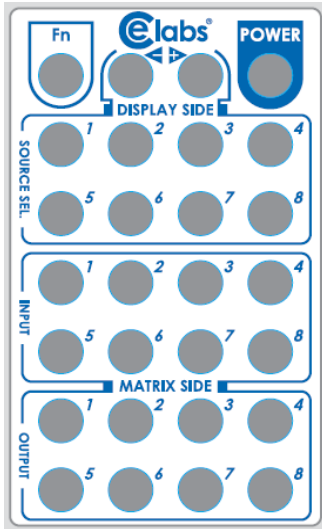

Function 0x17	0x0A	0x0C	POWER 0x02
SOURCE SEL. 1 0x54	SOURCE SEL. 2 0x55	SOURCE SEL. 3 0x56	SOURCE SEL. 4 0x01
SOURCE SEL. 5 0x57	SOURCE SEL. 6 0x58	SOURCE SEL. 7 0x59	SOURCE SEL. 8 0x06
INPUT 1 0x18	INPUT 2 0x5B	INPUT 3 0x19	INPUT 4 0x07
INPUT 5 0x1B	INPUT 6 0x5A	INPUT 7 0x1A	INPUT 8 0x04
OUTPUT 1 0x0E	OUTPUT 2 0x0D	OUTPUT 3 0x12	OUTPUT 4 0x05
OUTPUT 5 0x1C	OUTPUT 6 0x1D	OUTPUT 7 0x1F	OUTPUT 8 0x1E

Custom Code — IR3 Code: 0x12 0x21

Custom Code: 0x12 0x21								
	Output 1	Output 2	Output 3	Output 4	Output 5	Output 6	Output 7	Output 8
Source 1	0xA1	0xB1	0xC1	0xD1	0xE1	0xF1	0x11	0x21
Source 2	0xA2	0xB2	0xC2	0xD2	0xE2	0xF2	0x12	0x22
Source 3	0xA3	0xB3	0xC3	0xD3	0xE3	0xF3	0x13	0x23
Source 4	0xA4	0xB4	0xC4	0xD4	0xE4	0xF4	0x14	0x24
Source 5	0xA5	0xB5	0xC5	0xD5	0xE5	0xF5	0x15	0x25
Source 6	0xA6	0xB6	0xC6	0xD6	0xE6	0xF6	0x16	0x26
Source 7	0xA7	0xB7	0xC7	0xD7	0xE7	0xF7	0x17	0x27
Source 8	0xA8	0xB8	0xC8	0xD8	0xE8	0xF8	0x18	0x28

Custom Code — IR4 Code: 0x13 0x31

Custom Code: 0x13 0x31								
	Output 1	Output 2	Output 3	Output 4	Output 5	Output 6	Output 7	Output 8
Source 1	0xAE	0xBE	0xCE	0xDE	0xEE	0xFE	0x1E	0x2E
Source 2	0xAD	0xBD	0xCD	0xDD	0xED	0xFD	0x1D	0x2D
Source 3	0xAC	0xBC	0xCC	0xDC	0xEC	0xFC	0x1C	0x2C
Source 4	0xAB	0xBB	0xCB	0xDB	0xEB	0xFB	0x1B	0x2B
Source 5	0xAA	0xBA	0xCA	0xDA	0xEA	0xFA	0x1A	0x2A
Source 6	0xA9	0xB9	0xC9	0xD9	0xE9	0xF9	0x19	0x29
Source 7	0xA8	0xB8	0xC8	0xD8	0xE8	0xF8	0x18	0x28
Source 8	0xA7	0xB7	0xC7	0xD7	0xE7	0xF7	0x17	0x27

Note: Using terminal to set Custom Code

Example: Set custom code from 0x01 0xEE to 0x13 0x31

```
>>IR4 ----- command (using RS-232 terminal command mode)
```

```
>>IR4 ----- echo
```

Command	Custom Code
IR2	0x00 0xFF
IR3	0x12 0x21
IR4	0x13 0x31

For further information, please check the installation CD.

NOTICE

1. When adjusting the signal level on the receiver unit, please dial the rotary control switch from 7 to 0 and stop turning the rotary switch whenever the audio/video is playing normally. Inappropriate signal level setting may cause overpowering issue that would shorten the product life significantly!
2. Do not press any button more than once within 1 second on the HSMR Plus INPUT SELECT and the IR remote control as both devices need about 1 second to communicate with the matrix unit and validate the command you sent. Press multiple times within 1 second segment could lead to unexpected lock-on failure.
3. All HDMI over CAT5 transmission distances are measured using Belden 1583A CAT5e 125MHz UTP cable and ASTRODESIGN Video Signal Generator VG-859C and VG-870B.
4. The transmission length is largely affected by the type of Cat-5/5e/6 cables, the type of HDMI sources, and the type of HDMI display. The testing result shows solid UTP cables (usually in the form of 1,000ft bulk cables) can transmit a lot longer signals than stranded UTP cables (usually in the form of patch cords). Shielded STP cables are better suited than unshielded UTP cables. A solid UTP Cat-5e cable shows longer transmission range than stranded STP Cat-6 cable. Only solid UTP/STP cables are viable choice for long extensions.
5. EIA/TIA-568-B termination (T568B) is recommended for better performance.
6. To reduce the interference among the unshielded twisted pairs of wires in Cat-5/5e/6 cable, one can use shielded STP cables to improve EMI problems, which is worsen in long transmission.
7. Because the quality of the CAT5/6 cables has the major effect on how long the transmission limit can achieve and how good is the received picture quality, the actual transmission range is subject to one's choice of Cat-5/5e/6 cables. For desired resolutions greater than 1080i or 1280x1024, a Cat-6 cable is recommended.
8. If your HDMI display has multiple HDMI inputs, it is found that the first HDMI input [HDMI input 1] generally can produce better transmission performance among all HDMI inputs.
9. The HSMR Plus has been tested extensively and found that it doesn't require external power supply. If in rare situation you find it cannot work with the HSW88C Plus, please use any +5V power adapter to plug in the power jack and see if it can work. If not, please contact your technical support for further service.
10. Additional IR remote controls and IR blaster cables can be purchased as optional accessories to control the HDMI sources located separately.

Performance Guide for HDMI over CAT5/6 Cable Transmission

Performance rating		Type of CAT5/6 cable		
Wiring	Shielding	CAT5	CAT5e	CAT6
Solid	Unshielded (UTP)	★★★	★★★★	★★★★★
	Shielded (STP)	★★★	★★★	★★★★
Stranded	Unshielded (UTP)	★	★★	★★
	Shielded (STP)	★	★	★★
Termination		Please use EIA/TIA-568-B termination (T568B) at any time		

At: CE labs, 3209 Wood Dr., Garland, TX 75041, www.celabs.net
 Phone: (469) 429-9200 | Toll free: (800) 767-6189 | Fax: (469) 429-9205

FAQ

1. The quality of output video is not good enough, what can I do?

Please adjust the 8-level equalization on the receiver units. The HDMI signal level varies from 0 (strongest) to 7 (weakest) for respective transmission length from longest possible range to short distance. It is recommended to switch from 7 to 0 to find the optimal visual experience.

2. Can I use any kind of LAN cable?

Please check the NOTICE section (p.24) for more information about how to pick up a suitable cable.

3. Why the buttons on the front panel and remote control are all out of control?

It might be because of a function called System Lock which can prevent unnecessary misusage after installation. Please refer to the CHANNEL CONTROL section (p.12) to know how to unlock.

4. Can every TV work with the HDMI matrix?

Basically, the answer is YES. But if your TV can not support 1080p, please refer the EDID LEARNING section (p.19) to learn EDID from your TV.

5. What is EDID? Why do I need to learn EDID?

EDID contains the whole information of the display such as the resolution and audio setting which this display can support. Therefore, based on the EDID information, media player will pick up the most suitable resolution and audio setting to the display. In order to faithfully transmit the EDID information from display to the media player, learning EDID from display to this device is necessary.

6. What should I do to learn EDID for the matrix?

Due to the limitation of HDMI, the source device can only output one format of video and audio. In other words, the source device cannot output 720p and 1080p video at the same time, or output stereo and surround sound at the same time. Therefore, you may need to manually setup the DIP switch for each HDMI input for desirable audio/video output format. The mechanism of EDID Learning is to pick up the HDMI display with the lowest capability among the ones you would use for this input source. For example, if user would like to play the Input-2 upon output-3, output-5 and output-8, and only output-5 cannot support 1080p [support up to 720p only], please learn the EDID from the display connected to the output-5 at the Input-2 port. Of course, if output-5 could get the HDMI signals from every HDMI input, please learn EDID information from output5 to all eight HDMI inputs. For more information about EDID Learning, please refer to EDID LEARNING section (p.19).

7. My TV can support 1080p, but why there is no audio?

The default setting of this device is 1080p & 7.1ch audio, so there would be a problem if the TV cannot support 7.1ch audio. Please change the DIP switch of the chosen input from Default Mode to Safe Mode (p.7).

8. When I set an audio amplifier (AV receiver) between TV and the matrix to extract 7.1ch audio, but why there is still no audio?

Basically, the default DIP switch setting of the chosen input can support 7.1ch audio, but the problem is that the EDID of the amplifier still cannot match the default setting. Therefore, the best method is to learn EDID from the amplifier directly. Please refer to EDID LEARNING section (p.19) and follow the steps to learn the EDID. When learning EDID from the amplifier, user just needs to connect the matrix and amplifier. *Please don't connect HDMI cable between amplifier and TV when the EDID learning is proceeding.*

9. When I play the same content upon multi-displays, why only the TV equipped with amplifier can have 7.1ch audio, and the others don't have 7.1ch audio even no stereo audio?

Due to the limitation of HDMI, the source only can choose one video and one audio format to play, which can be either 1080p and 7.1ch or 1080p and stereo audio. It means when the user sets the matrix at 1080p and 7.1ch, the source will only play the content under this format. Therefore if the TV cannot decode 7.1ch audio, there is definitely no audio.

10. Is there an easier method that can allow this matrix switcher to work properly?

Please refer to the third method of EDID learning to switch among different default EDID profiles at the remote side. Through the switching from 1st to 5th default EDID profile, stay with the one that can get the audio and video as you wish.

SW Position		Video	Audio	Description
Pin 1	Pin 2			
ON [↓]	ON [↓]	Bypass	Stereo	EDID Learning & Stereo Mode – for learning EDID from the display while enforcing stereo output if any HDTV cannot play surround sound normally

11. I have tried every method above, why there is still no audio anyway?

It is because the media player cannot recognize the EDID of the display. Therefore please adjust the DIP switch of this input to **EDID Learning & Stereo Mode** to have audio properly.

CE labs can support many areas of your audio and video distribution needs

We manufacture:

- Digital Signage software and Media Players
- HD Matrix Switchers
- RF amplifiers
- HDMI and Component HD distribution amplifiers
- CAT 5 Signal Extenders
- VGA Extenders and Splitters
- and cables of all types.

See our full product line at www.celabs.net

WARRANTY

Cable Electronics, Inc. warrants this product to be free from defects in material and workmanship, under normal use and service, for a period of one year from the purchase by the original purchaser. If this product is defective or malfunctions, Cable Electronics will replace or repair this unit (at their option) within a reasonable time. No expressed or implied warranty is made for any defects caused by immersion or exposure to liquids, abuse, and neglect, improper operation of unit, excess wear and tear and defects resulting from unauthorized disassembly and or modification.



3209 Wood Drive
Garland, TX 75041
Phone: (469) 429-9200
Toll free: (800) 767-6189
Fax: (469) 429-9205
www.celabs.net

Document: HSW88C Plus_manual.pdf